



MODEL


8601

User Leaflet

Dimensions

9" (length) x 4⁵/₈" (width)
x 1³/₄" (depth)

The Controls

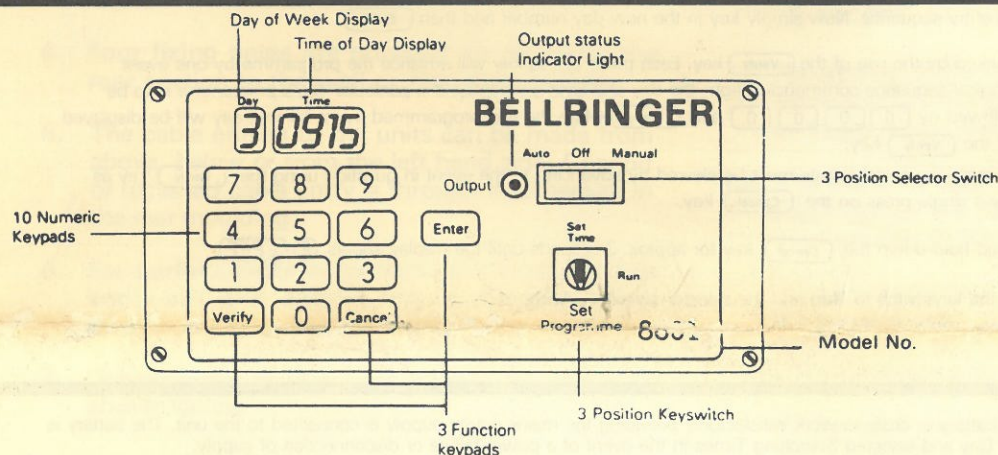

CAUTION The unit operates at mains voltage and should only be opened by a qualified engineer after disconnection from the mains supply.

Description

The **Day** and **Time** are displayed as five digits on a liquid crystal display (L.C.D.)

The first digit in its separate window marked **Day** will be a numeral from 1 to 7 which may be allocated in sequence to the days of the week at the user's discretion. The normal convention is Monday = 1, Tuesday = 2 Sunday = 7.

The remaining four digits in the window marked **Time** will display the time to a resolution of one minute from 0000 to 2359.

A short 'bleep' will be heard when a keypad is pressed. In addition when a numeric keypad is pressed the associated digit of the L.C.D. will either blink or change.

The 3 position selector switch may be set to **Off** to override the programmes for silencing for holidays or they may be set to **Auto** to follow the programme which has been set, the third position marked **Manual** is a continuous ON but only as long as the switch is held down.

The Output status indicator light will be illuminated when the selector switch is at **Auto** and a programme event occurs, or when the selector switch is held in the **Manual** position.

The output can be set at time of installation to provide either an ON duration from 1 to 15 seconds in half second pulses (intermittent mode), or a continuous pulse from 1 to 15 seconds (continuous mode).

It is recommended that the key be removed from the keyswitch to prevent unauthorised or accidental changes to the settings. The key can only be removed when in the **Run** position.

Time of Day

The mains electricity supply must be ON, the key inserted and turned to the **Set Time** position before carrying out the operations below.

When the timeswitch is first connected, or when the battery has been allowed to discharge fully, and the mains electricity supply is switched ON a dash (—) will be displayed in each of the five digit positions.

Decide which day of the week you wish to assign as Day 1.

Press the number key representing the current day of the week (listen for the 'bleep').

The remaining days will be automatically numbered in sequence.

Key in the time using four keypads e.g. 8:30 a.m. must be keyed as **0 8 3 0** and 6:15 p.m. as **1 8 1 5**

The unit will not allow the entry of a spurious day or time e.g. day 8 will not be accepted nor will a time entry of 3600. Depression of an out of range key will not register on the display; the L.C.D. digit will blink but remain unchanged until an acceptable number is keyed.

DO NOT PRESS ANY FUNCTION KEYPADS.

Returning the key to the **Run** position will enter the time shown on the display, enabling synchronisation to be performed with your wrist watch.